

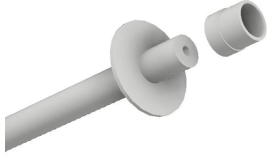



8-Peg Spyder Apron Rack, RAR-SAR8

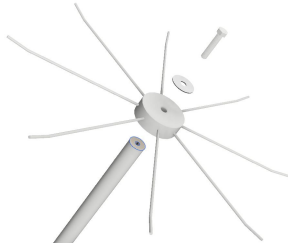
Tools required.

- Phillips Screwdriver
- 3/16" Allen Wrench
- 7/16" socket or adjustable wrench

Instructions

Step	Description	Picture
1	Begin with locating the base. Place the base upside down.	
2	Attach the Caster Wheels to the base. Attach the caster wheels by pushing the stem into the holes at the ends of the base's legs.	
3	Slide the bushing on the the end of the rod that has the stopper.	
4	Insert the Rod and the bushing into the top of the base. On the bottom of the base place a fender washer on the small bolt and tighten the bolt to the rod.	

8-Peg Spyder Apron Rack, RAR-SAR8

5	<p>Rest the base on the level area and locate the Peg Support. Place the Peg Support on to the top of the rod. Tighten the Peg Support using a fender washer and a the bolt.</p>	
---	--	--

