



# ASSEMBLY INSTRUCTIONS

## MOBILE RADIATION APRON VALET RACK



COPYRIGHT ©2025. ALL RIGHTS RESERVED

[PHILLIPS-SAFETY.COM](https://phillips-safety.com)

# ABOUT PHILLIPS SAFETY

Phillips Safety is the industry leader in occupational safety eyewear. In business for over 100 years, you are being served with the dedication and craftsmanship of a family owned company.



Phillips Safety has been producing occupational safety glasses since 1905 and continues to develop and produce the highest quality glasses and lenses today. A leading manufacturer of specialty safety eyewear in the United States, Phillips Safety adheres to strict ANSI Z87-2+ and EN 207 CE standard certifications, holding itself to the highest

standard and prides itself on producing glasses with the finest quality materials available.


All safety glasses produced and sold by Phillips Safety meet strict industry standards for military, medical, research laboratories, and a variety of other industries.

With Phillips Safety's dedicated team, you can rest assured knowing that all your prescription safety needs are met.


**BOX 1**

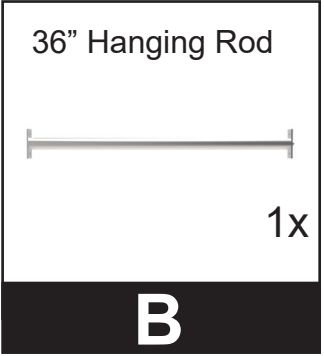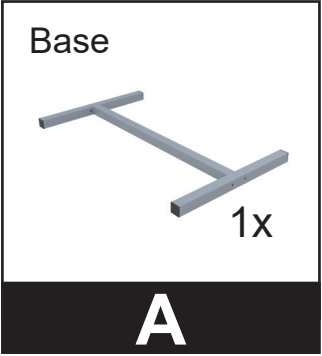



**BOX 1 - HARDWARE**

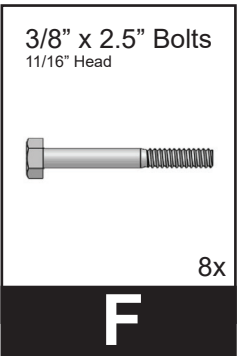

**BOX 2**

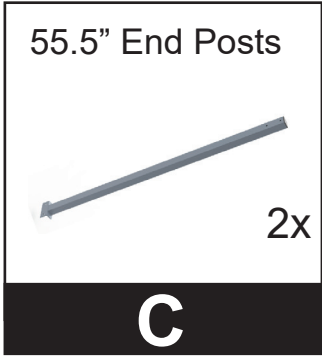

**BOX 3**


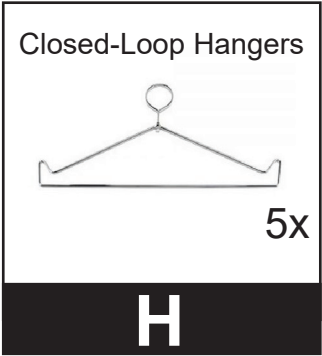
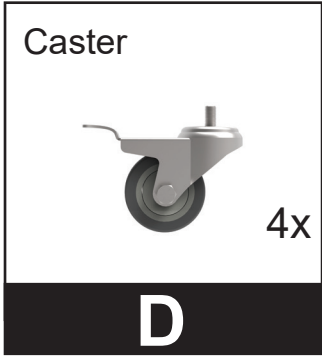


**ASSEMBLY INSTRUCTIONS**  
MOBILE RADIATION APRON VALET RACK

# STEP 1

1. Attach Caster **D** to Base **A**.

## PARTS NEEDED

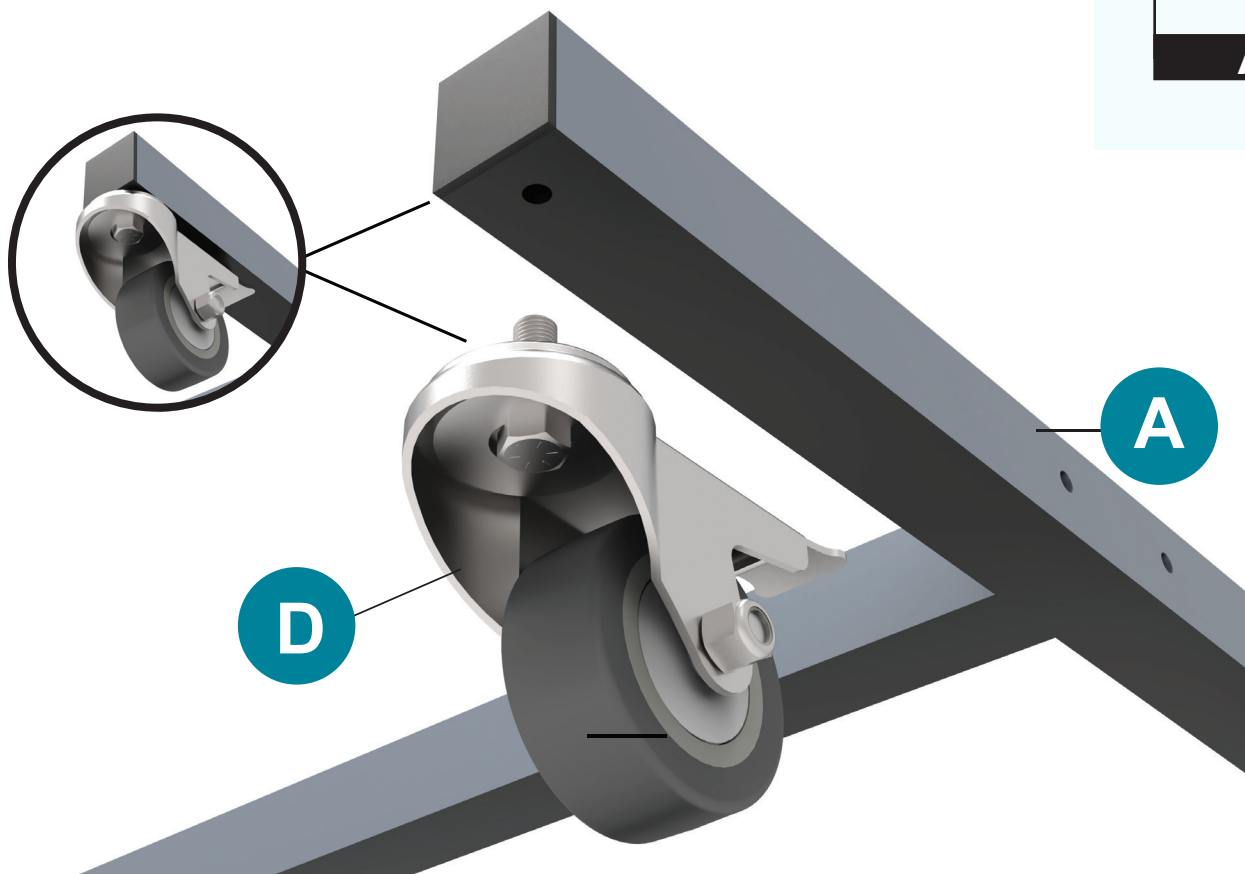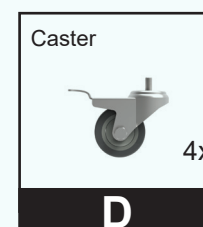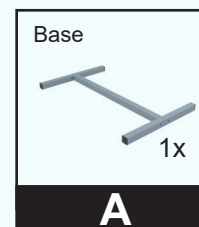


## BASE & CASTERS





**ASSEMBLY INSTRUCTIONS**  
MOBILE RADIATION APRON VALET RACK

**STEP 2**

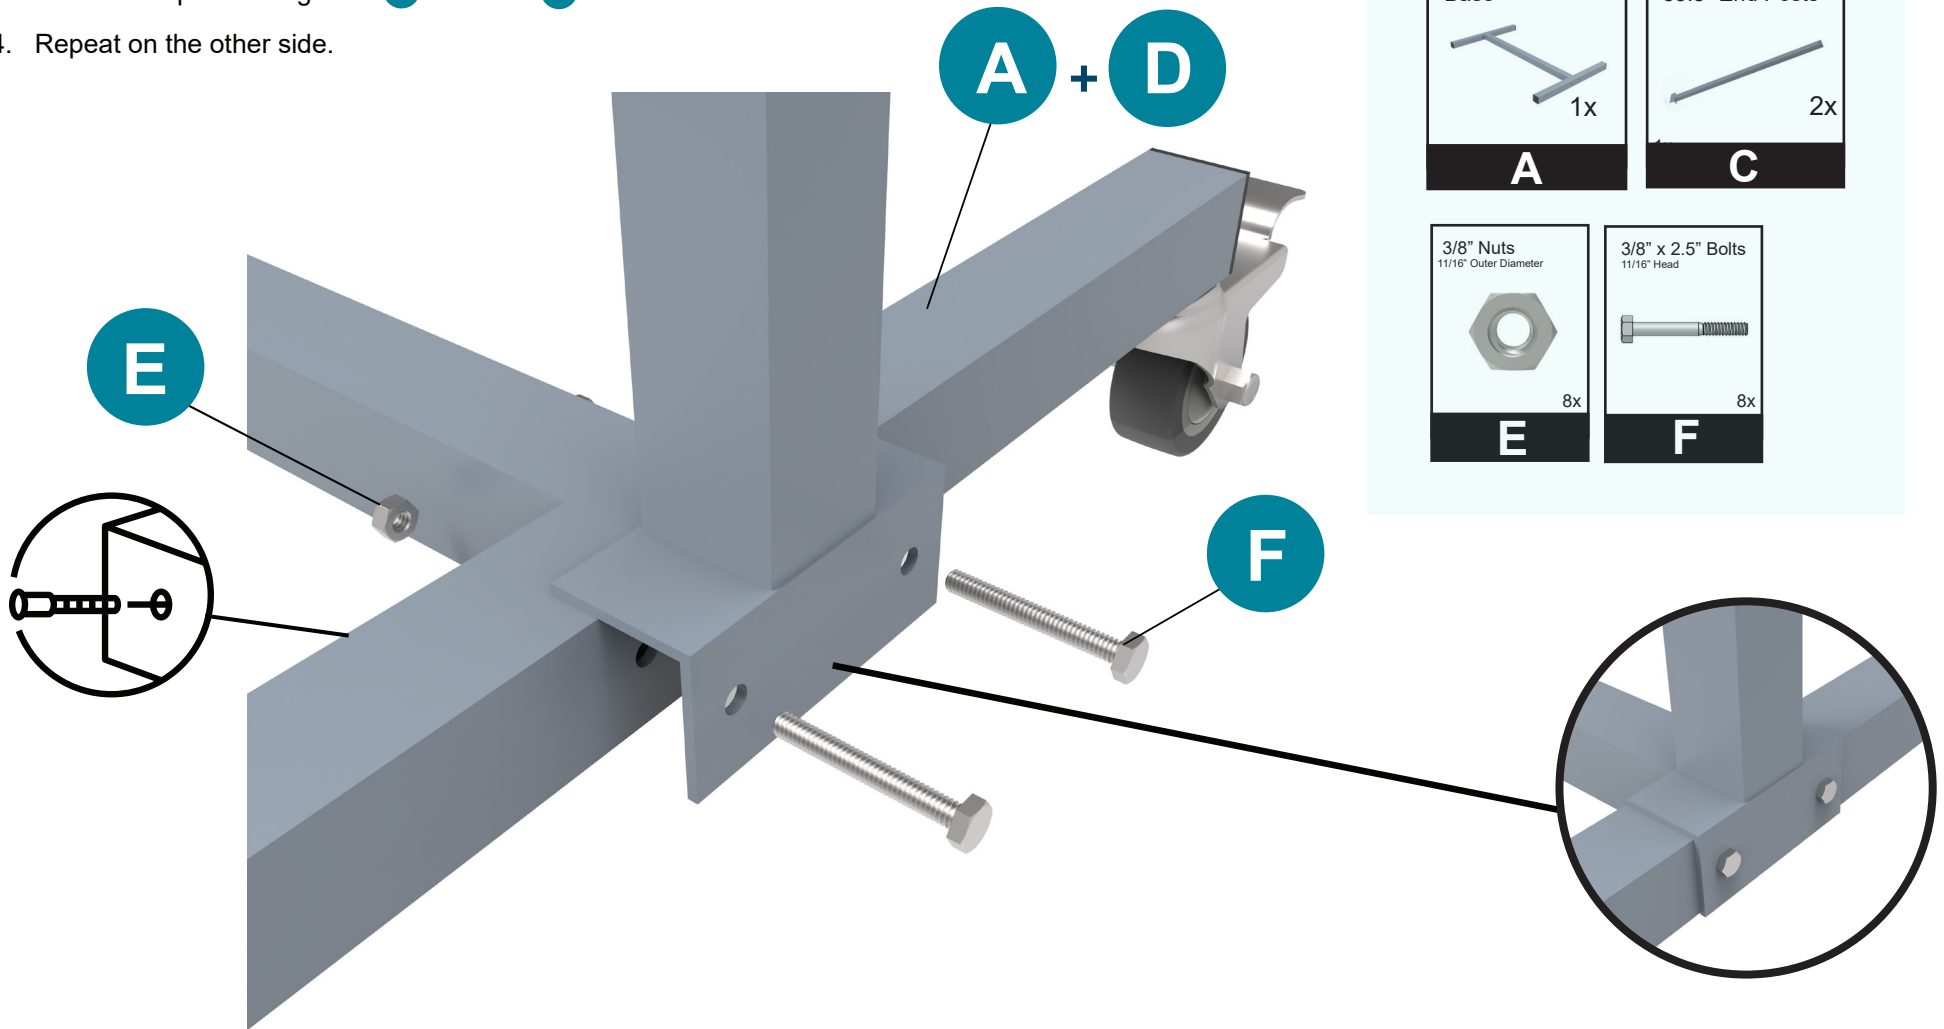2. Align Side Post **C** to Base **A** + **D**.
3. Secure into place using Bolt **F** and Nut **E**.
4. Repeat on the other side.

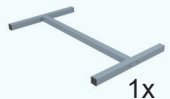

**PARTS NEEDED**

<p>Base</p>  <p>1x</p> <p><b>A</b></p>	<p>55.5" End Posts</p>  <p>2x</p> <p><b>C</b></p>
<p>3/8" Nuts 11/16" Outer Diameter</p>  <p>8x</p> <p><b>E</b></p>	<p>3/8" x 2.5" Bolts 11/16" Head</p>  <p>8x</p> <p><b>F</b></p>

**SIDE POSTS**

**ASSEMBLY INSTRUCTIONS**  
MOBILE RADIATION APRON VALET RACK


**STEP 3**

5. Remove plate from the end of the Hanging Rod **B** with Allen Wrench **G**.

This will enable hangers to be installed.



**PARTS NEEDED**

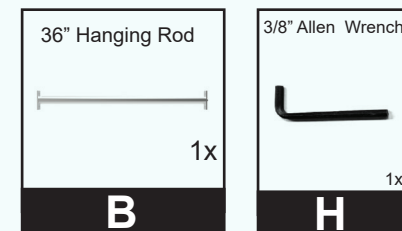


**HANGING ROD**


**ASSEMBLY INSTRUCTIONS**  
MOBILE RADIATION APRON VALET RACK

**STEP 4**

6. Place hangers **H** on rod **B**.
7. Using the Allen Wrench **G** reattach the silver plate to the Hanging Rod **B**.

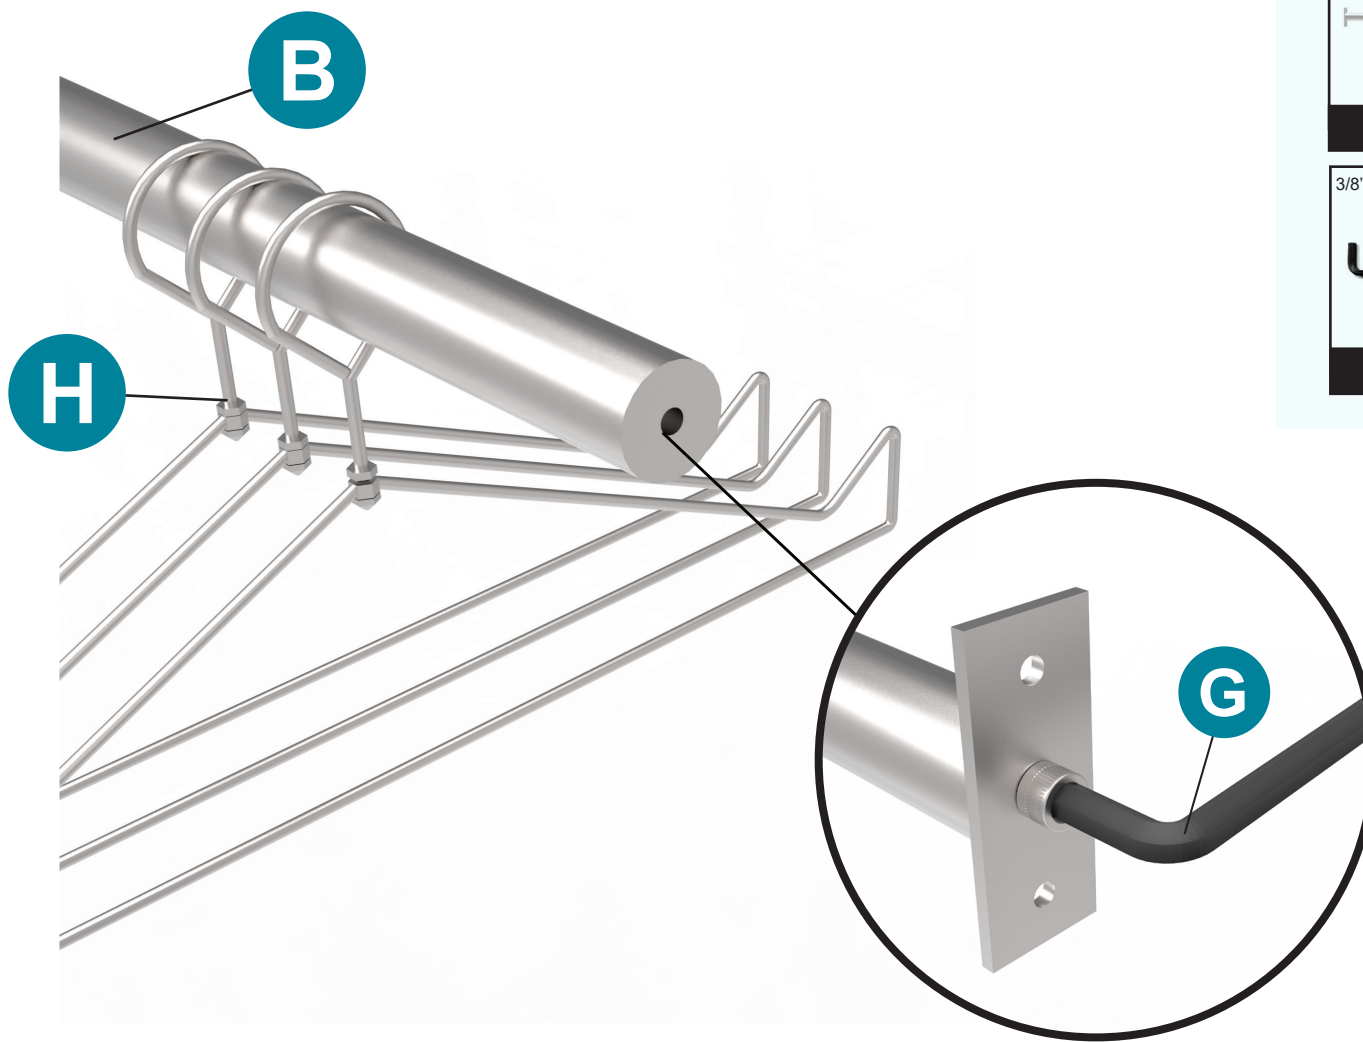


**PARTS NEEDED**

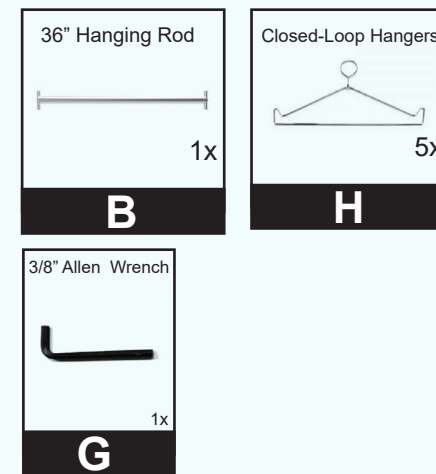

**HANGERS**

8. Align the Hanging Rod **B** to Post **C** by fitting the end plate insert in hole.
9. Attach with Bolt **F** and Nut **E**.

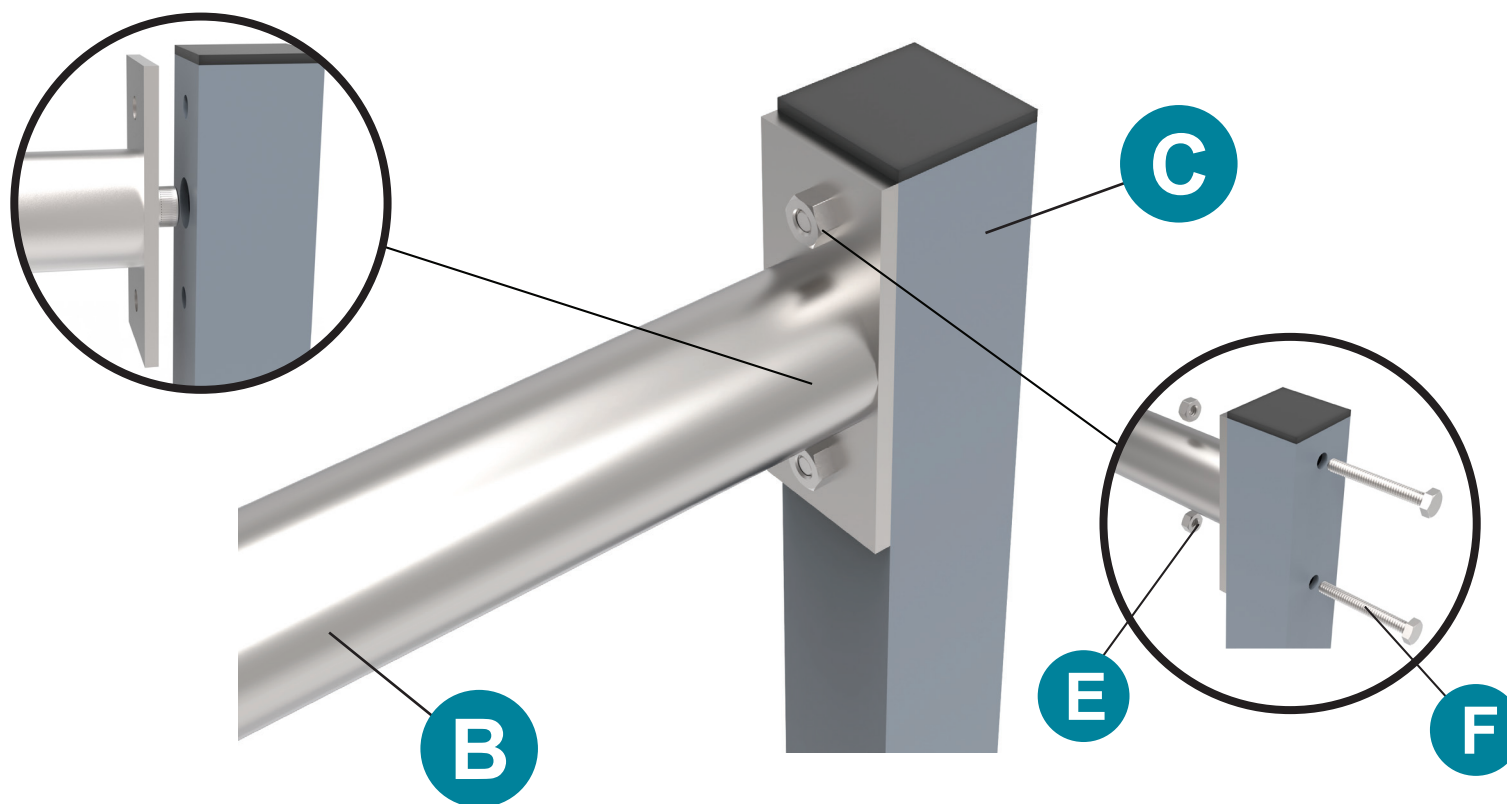



**ASSEMBLY INSTRUCTIONS**  
MOBILE RADIATION APRON VALET RACK

**STEP 6**

The Assembly is now complete




**FINAL PRODUCT**

# CONTACT

Should you need any further information,  
please do not hesitate to contact us.

123 Lincoln Blvd, Middlesex, NJ 08845, USA 

+1 (866) 757 1307 

service@phillips-safety.com 

www.phillips-safety.com 